


## MMI KEYPAD FEATURES

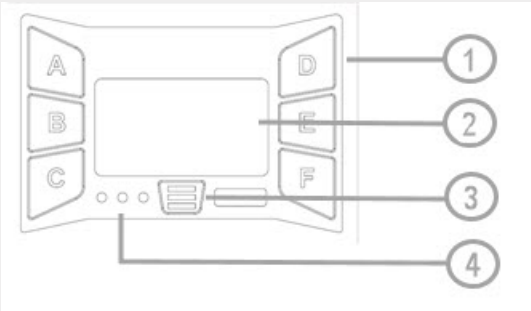

Number	Keypad Item	Description
1	A-F Letter Keys	Coin Dispense and menu navigation
2	Display	Menu and Error Messages
3	≡ Key	Access service and set-up menus
4	Status LEDs	Red, Amber and Green

## SERVICE MODE OPTIONS

Press ≡ to view commonly used Service Mode options; further options are available in the Setup menu.

Service Mode Navigation	Action
≡ A	Par Coin Tubes
≡ D ≡	Custom cassette set up
≡ D then 3 Letter Keys	Predefined cassette (Code can be found on the front of the cassette)
≡ E	Basic set up menu
≡ ≡	Audit


## LED LIGHT CODES

The Status LEDs provide at-a-glance information about the unit's health.

Sequence	Meaning
● Steady On	Gryphon is working properly
● ● ● Cycles 5x	Boot up sequence
● One Flash	Coin accepted
● Two Flashes	Coin rejected
● Three Flashes	Coin rejected/inhibited by machine
● Slow Flash after pressing ≡	Gryphon in Service/Set-up mode
● Fast Flash after pressing ≡	Audit processing /Firmware
● Steady On	Gryphon inhibited by VMC
● One Flash	Coin Return Pressed
● Two Flashes	Acceptor Error
● Three Flashes	Cassette Error
● Four Flashes	Dispenser error
● ● Alternating	Unit failure, replace

## GRYPHON QUICK REFERENCE GUIDE

### GENERAL KEYPAD OPERATION

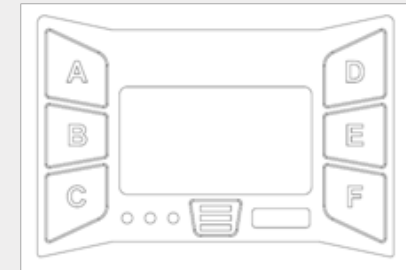

Gryphon's MMI Screen has been designed with the end-user in mind. The MMI updates its interface as needed in each section. Always use the on-screen guidance, but when in doubt, this chart lists general sub-menu navigation tips.

When you are not using a menu, pressing a letter key dispenses a coin from the corresponding tube.

### MENU KEYPAD OPERATION

Navigation	Key
Scroll Up	D
Scroll Down	E
Move Left	A
Move Right	B
Next Page	F
Previous Page	C
Display previous menu level	Press ≡ once
Return to the home screen	Hold ≡ for three seconds

## SYMBOLS

Symbol	Meaning
	Menu Navigation
	Gryphon is OK
	Gryphon requires assistance
	Gryphon requires replacing
	Connected via USB to PC
	Connected to USB
	Error

## CASSETTE CONFIGURATION

There are two methods to configure the cassette. **Please note: The cassette must be empty before proceeding.**

### Cassette Code

If you are changing the full cassette, press , CASSETTE, then:

1. Enter the code located on the front of the cassette (e.g. AAB)
2. Press SAVE - if the code is not recognized, follow the Custom Cassette steps below
3. When prompted, press START to calibrate

### Creating Custom Cassette

Follow these steps if the code is not recognized or to change individual tubes. Press , CASSETTE, then:

1. Select CUSTOM
2. Use the MMI to choose the tube (A-F) you'd like to edit
3. Scroll through the coin list and select your coin
4. Press SAVE to program the tube
5. When all tubes have been programmed, press
6. When prompted, press START to calibrate

## SETUP MENU ITEMS

Press E to view the Setup menu.

Option	Meaning
Par	Change the mode, target levels, target value and create a snapshot
Change Management	Update the cassette tube fill level and payout mix
Machine Options	<ul style="list-style-type: none"> <li>- Change: MDB level, safe count, float coins, coin scaling, decimal point reporting and country code</li> <li>- View coin counts</li> </ul>
Coin Config	Change setup for individual coins and update exchange rate
Audit Config	View audit info
General	Calibrate tubes, change accepted currency, set the Clean Me level, and update general Gryphon interface settings
Error Log	View recent errors
Test	Run tests to confirm optimal operation
Language	Change the language

## AUDIT AND FIRMWARE



By using the MicroUSB port shown above, you can collect audit files and update the Gryphon's firmware.

## COMPONENTS

